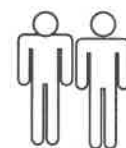
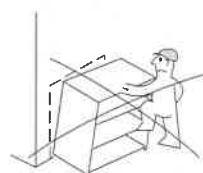
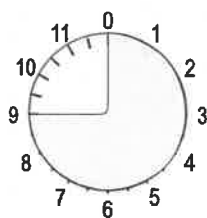
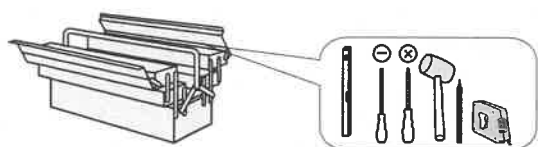
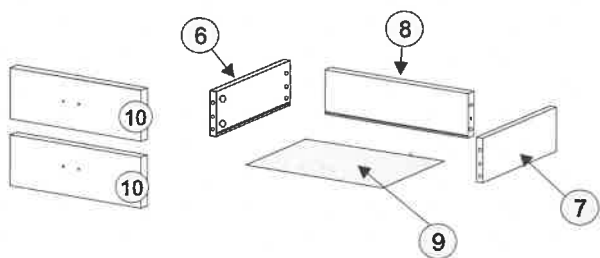
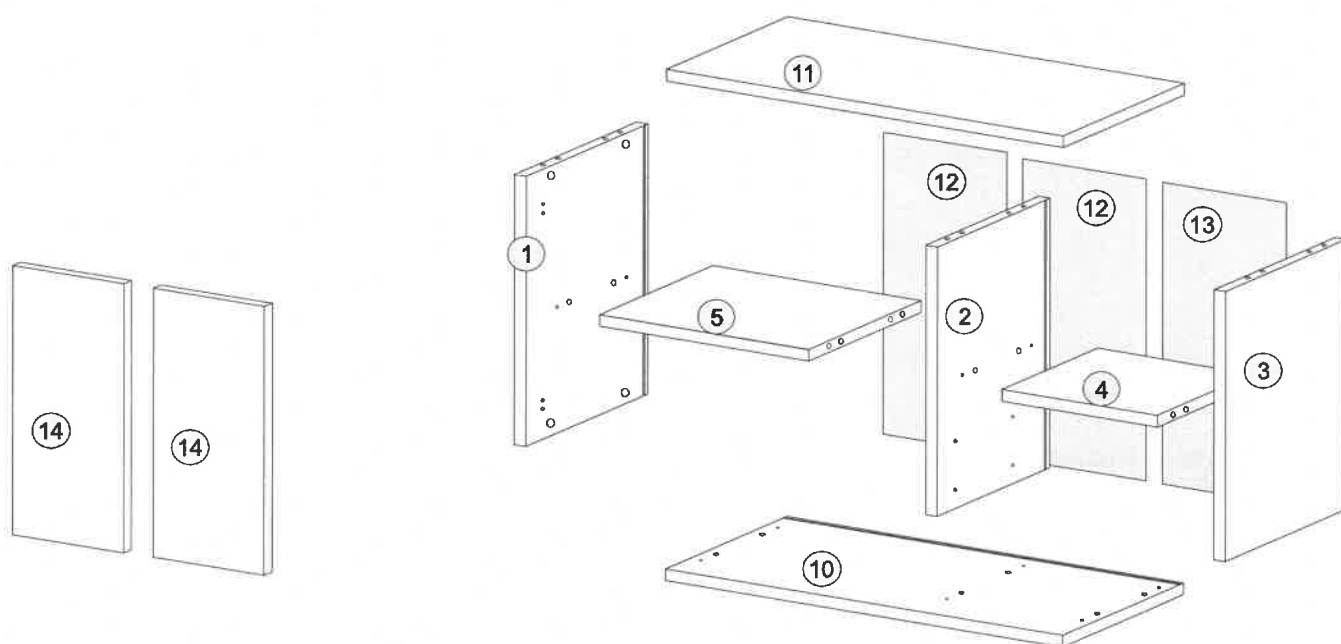
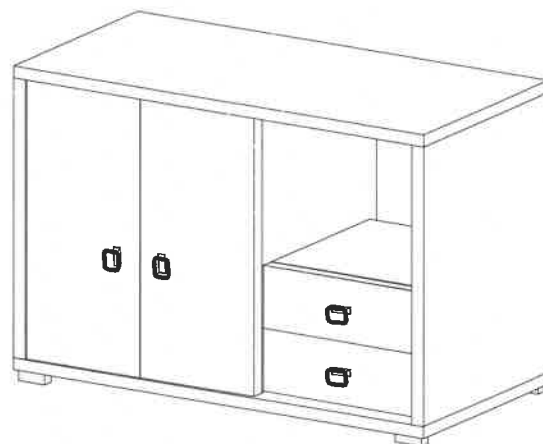






















KEVIN 6

Instrukcja montażu



A  x1	B  x32	C  x28	D  x28
D1  x12	D2  x4	D3  x12	H  x4
L  x4	W1 5,3x13  x16	W2 4x30  x10	W3 4x20  x8
T  x5	S  x1	St  x14	W4 4x16  x8
E1  x2	E2  x4	E3  x2	Y  x1

